















# EB-20 #1000-0020 BRAKE FLUID EXCHANGE

## Adapter Usage    1-1-16    Tech Support 877-955-0515

**All adapters shown are used in conjunction with the EBS Brake Fluid Exchange Equipment and ONLY TO BE USED FOR SERVICING VEHICLE BRAKE FLUID HYDRAULIC SYSTEMS. No other use is authorized or recommended – possible damage to vehicle/equipment**






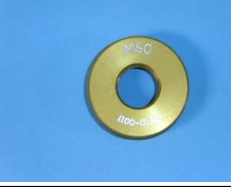

<p><b>Master Tool #1100-0010 –Standard Set</b> Used to provide venting and FILL Line connection – all adapters, except the Brina I, Uni-Hang and C-3 Hanging, have a built in vent.</p>		<p><b>CF-4 #1100-0065 – Standard Set</b> Used for Chrysler, Ford, Hyundai, Infinity, Lincoln, Mercury, and Nissan vehicles that have ear type reservoir cap connection. Master Tool needed</p>	
<p><b>Hold Down #1100-0020 – Standard Set</b> Holds adapters that do not have integral connection means – threads, ears, etc., such as the Brina Tools, the THN series, LT, etc.</p>		<p><b>C-3 #1100-0070 + C-Blank #1100-0080 Std</b> Used on Chrysler, Dodge, Jeep vehicles with individual or dual screw on master cylinder reservoirs. Master Tool required</p>	
<p><b>Mazda HAD #1100-0020 HAD – Standard Set</b> Used on any of the chained adapters where the chain might rub against the plastic part of the reservoir or other damageable parts</p>		<p><b>C3 Hanging #1100-0090 – Standard Set</b> Used on Chrysler vehicles whose reservoirs are shrouded. Eliminates the need to remove the shroud.</p>	
<p><b>Brina I Tool #1100-0030 – Standard Set</b> Provides a variable fitting adapter for round opening master cylinder reservoirs. Requires the Hold Down Adapter to secure.</p>		<p><b>Uni-Hang #1100-0100 – Standard Set</b> Use with almost any adapter to eliminate shroud removal.</p>	
<p><b>Brina II #1100-0040 – Standard Set</b> Variable fitting adapter for round opening reservoirs. Requires the Master Tool and Hold Down Adapter; or Uni-Hang, for venting and FILL attachment.</p>		<p><b>GM-4 #1100-0125 – Standard Set</b> Used on various year and model GM vehicles that have ear type reservoir cap connection. Master Tool required.</p>	
<p><b>Brina III #1100-0050 – Standard Set</b> Variable fitting adapter for round opening reservoirs. Requires the Master Tool and Hold Down Adapter; or Uni-Hang, for venting and FILL attachment.</p>		<p><b>LT #1100-0130 – Standard Set</b> Used for Toyota and Lexus vehicles that have a push on master cylinder reservoir cap. Master Tool and Hold Down #1100-0020 required.</p>	



# EB-20 #1000-0020 BRAKE FLUID EXCHANGE

## Adapter Usage 1-1-16 Tech Support 877-955-0515

**All adapters shown are used in conjunction with the EBS Brake Fluid Exchange Equipment and ONLY TO BE USED FOR SERVICING VEHICLE BRAKE FLUID HYDRAULIC SYSTEMS. No other use is authorized or recommended – possible damage to vehicle/equipment**

<p><b>Mits 3.0 #1100-0040 – Standard Set</b> Used for Asian vehicles with a 3.0” screw on reservoir cap. Master Tool required. The Brina I with Hold Down Adapter can also be used.</p>		<p><b>N-1 #1100-0175, N-2 #1100-0177, N-3 #1100-0185 <u>Not in Standard Set</u></b> Nissan and Infinity vehicles from 2002 thru current – overlap between years. Master Tool needed</p>	
<p><b>Euro#1100-1200 – Standard Set</b> Used on European vehicles with screw on reservoir caps. Master Tool required.</p>		<p><b>LM #1100-075 - <u>Not in Standard Set</u></b> Used on GM vehicles - Lacrosse, Malibu etc.; Master Tool required.</p>	
<p><b>THN 2.0 #1100-0160 – Standard Set</b> Used on Asian vehicles that have a push on type reservoir cap. Master Tool and Hold Down #1100-0020 required.</p>		<p><b>LT-2 #1100-0132 – <u>Not in Standard Set</u></b> Used on Lexus GS, 300,460,470; IS 300, IS, LS, LX models and various Toyotas that have cap hold down in the interior of the reservoir neck. Master Tool required</p>	
<p><b>Volvo #1100-0180 – Standard Set</b> Used on Volvo vehicles. Also on some Fords, Lexus, Saturn, Honda, Kia and Saab. Master Tool required</p>		<p><b>HNMS #1100-0135 – <u>Not in Standard Set</u></b> Used on Honda, Mazda, Nissan and Subaru Master Tool required</p>	
<p><b>B-Plate #1100-0250 – Standard Set</b> Covers all rectangular opening reservoirs. Integral chains secure adapter. Requires the Master Tool.</p>		<p><b>MSO #1100-0138 – <u>Not in Standard Set</u></b> Various Nissan models – Sentra, etc. - 2006 to current. Master Tool required.</p>	
<p><b>F-1 #1100-0055 and F-2 Adapter #1100-0057 <u>Not in Standard Set</u></b> Used on various Ford vehicles (2006 and newer) Fusion, etc. with ear attachment. Requires the Master Tool.</p>		<p><b>THMN 2.2 E #1100-0165E – <u>Not in Standard Set</u></b> Used for Toyota and Honda vehicles that have ears on the reservoir cap. Master Tool and Hold Down #1100-0020 required.</p>	